



# Standard Sheet Metal Works LLC,

Quality Engineering \* Manufacturing


## *E-Z Joint Connector* <sup>Pat. Pend.</sup> *Installation* Easy Step Instructions

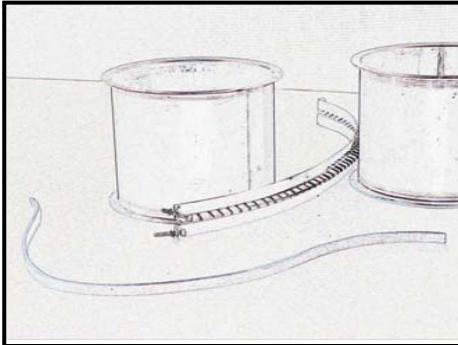


**Step 1**  
Precut Gasket to approximate length +2".

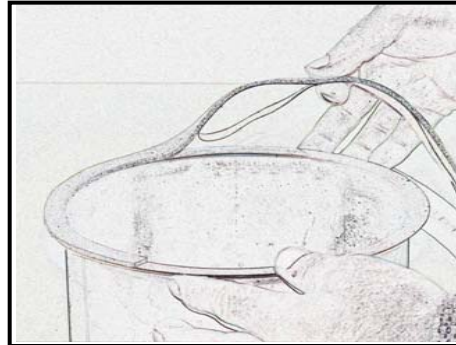


**Step 2**  
Apply Gasket to face of flange.

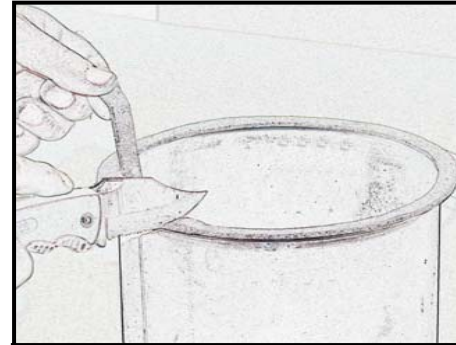


**Step 3**  
Trim excess Gasket Material.

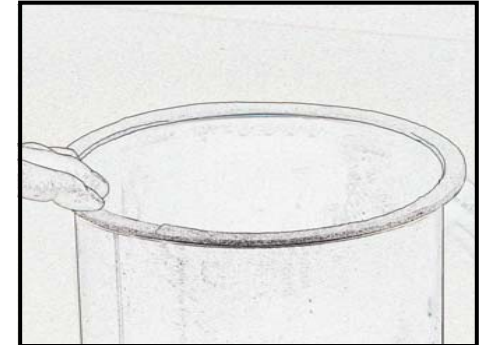


**Step 4**  
Smooth and inspect Gasket material to insure good seal.

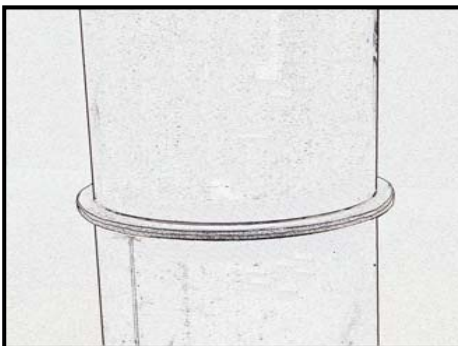


**Step 5**  
Align Pipe Joints and plan on band joint to be located on top of horizontal runs.

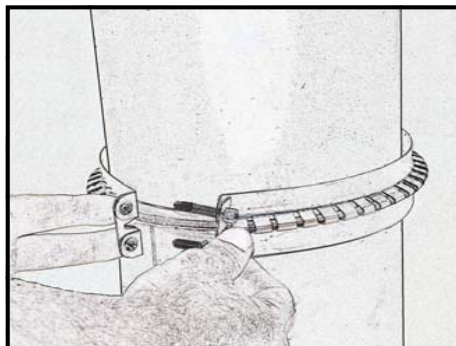

**Step 6**  
Apply E-Z Band to 1/2" Flanges.

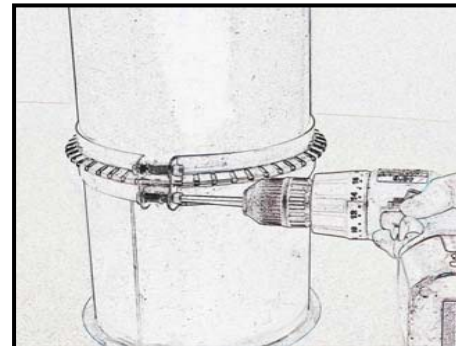

**Step 7**  
Tighten E-Z Band to compress Gasket.

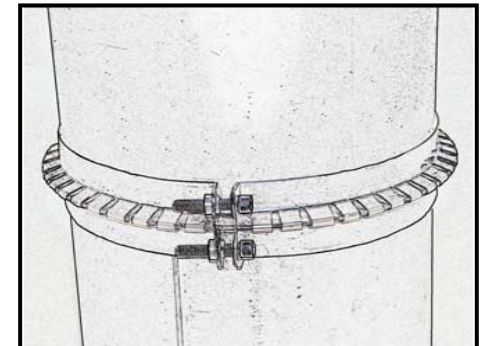

**Step 8**  
Visually inspect to confirm quality of joint.